

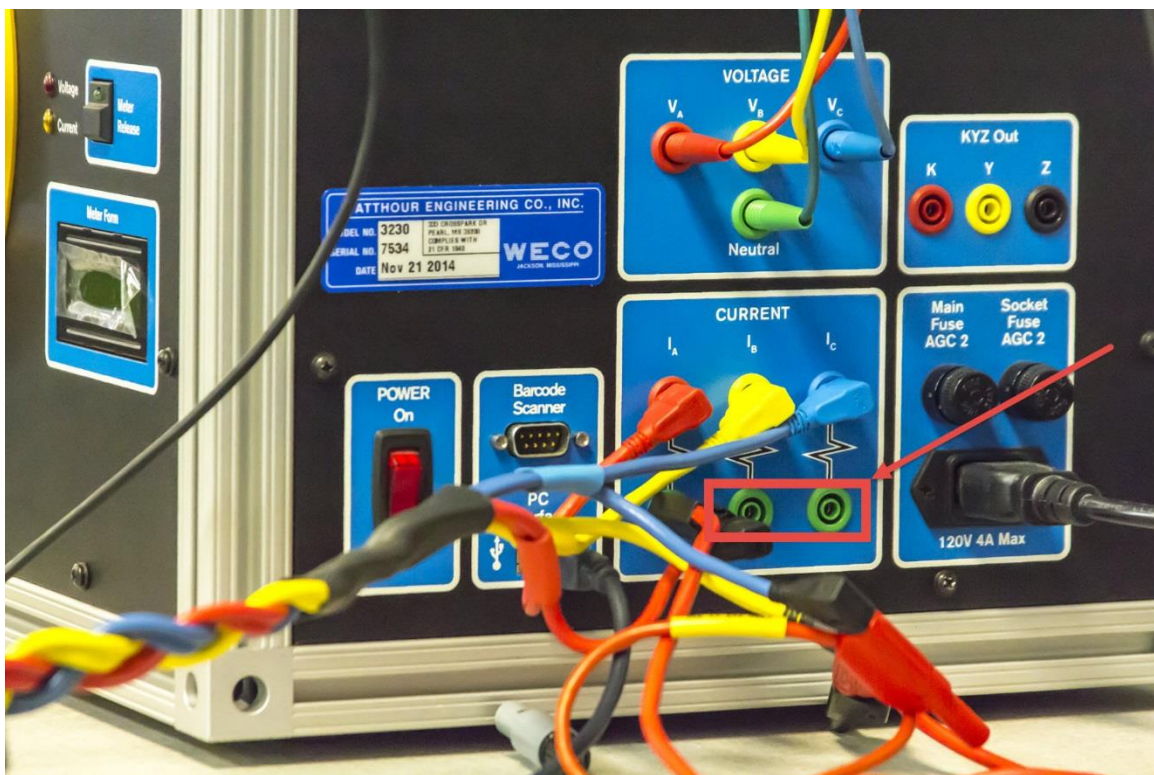


Procedure for testing a 7S or 24S meter with a RW-30X/RW-30/WE-20 and 3230 shop stand:

1. Make sure no current or voltage is being applied to the 3230 shop stand.
2. Remove the current return cables from Ib and Ic phase 4 mm plugs on 3230 shop stand.

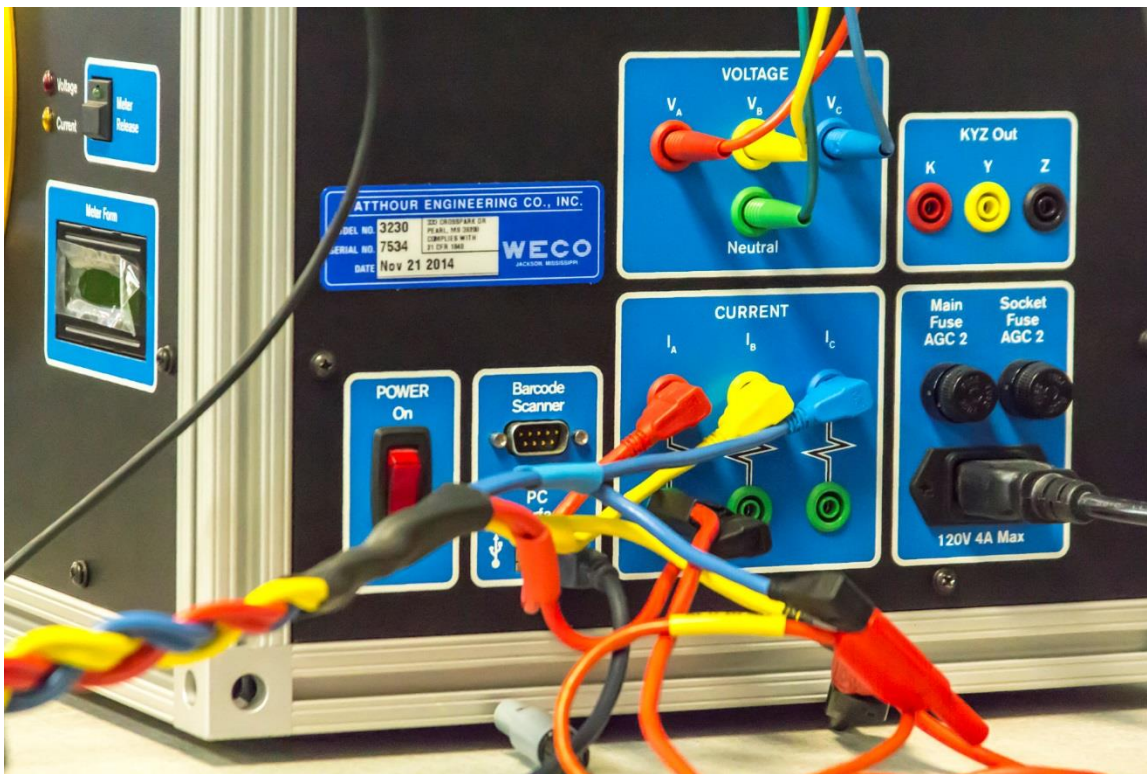

- Using 4 mm stackable plugs, connect Yellow (B phase) and Blue (C phase) current returns to the I_a phase current return.

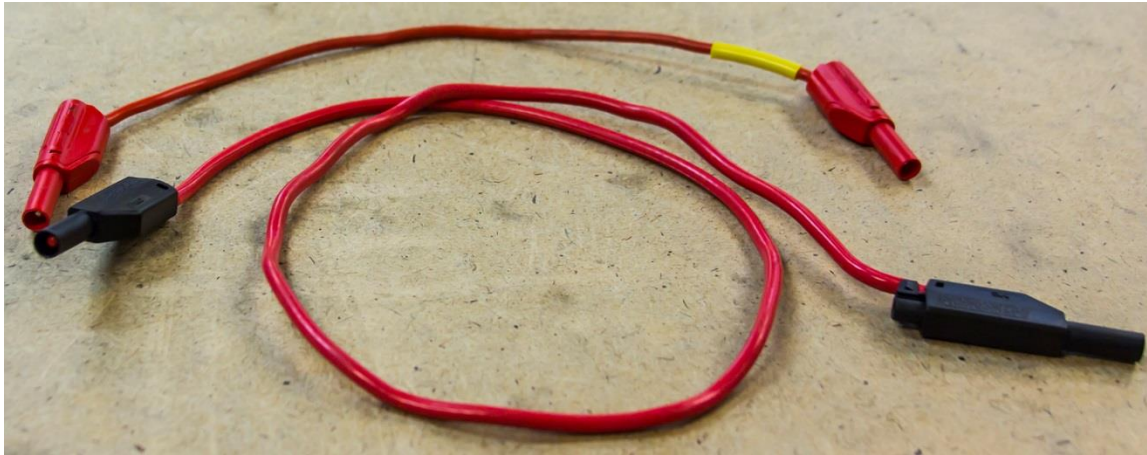

- The 3230 is now ready to test a 7S or 24S meter.